

PRO TRIM 10:

The convenient lightweight scraper for every day

OPERATING & SAFETY INSTRUCTIONS



Using the scraper





Remove blade protector

 firmly push away the black slide from the blade using both thumbs to remove the blade protector.
 Press lightly.

Putting the scraper at safety - extend blade protector

 pull the black slide to the blade to put the scraper at safety



ATTENTION!

UNGER blades are razor-sharp.
Always handle with greatest care!

<u>^!\</u>

Safety instructions:

- The UNGER glass scrapers with carbon blades, featuring 2 sharp edges, are perfect for removing bird droppings, paint, tape, stickers and postconstruction debris from the glass.
- Check if glass is scratch-resistant and suitable for scraper use. Unsuitable for use on Plexiglas, crown glass, solar glass, safety glass (ESG). Follow the manufacturer's care instructions
- Perform a scrape test in advance on an inconspicuous section
- Before starting work, check the glass for damage and report it, if necessary
- Check the blade for damage and change it, if necessary, or reverse it
- The surface to be scraped should always be wet
- It is best to use a **release agent**, e.g. "UNGER's Liquid"
- Always scrape in one direction!
 Never pull the scraper back scratch risk!
- After scraping, check if adhesive or stucco residues are stuck to blade. If necessary, change or reverse blade

Changing the blade



Open the body

• press green button deep inside to open the body



Turn or change the blade

- remove or turn the blade
- blade has to fit both pins (arrows)

ATTENTION: Danger of injuring oneself!



Close body

- hold both sides of the body that

 a) both lateral noses hook in the
 body
 b) three internal noses can click
- press the both halfs of the body, green button has to click into place audible

into the top side of the body



ATTENTION:

While changing and turning the blade hold scraper even (black slide at the top) avoid falling off the blade:

Danger of injuring oneself!!!









